


TYPICAL POST INSTALLATION

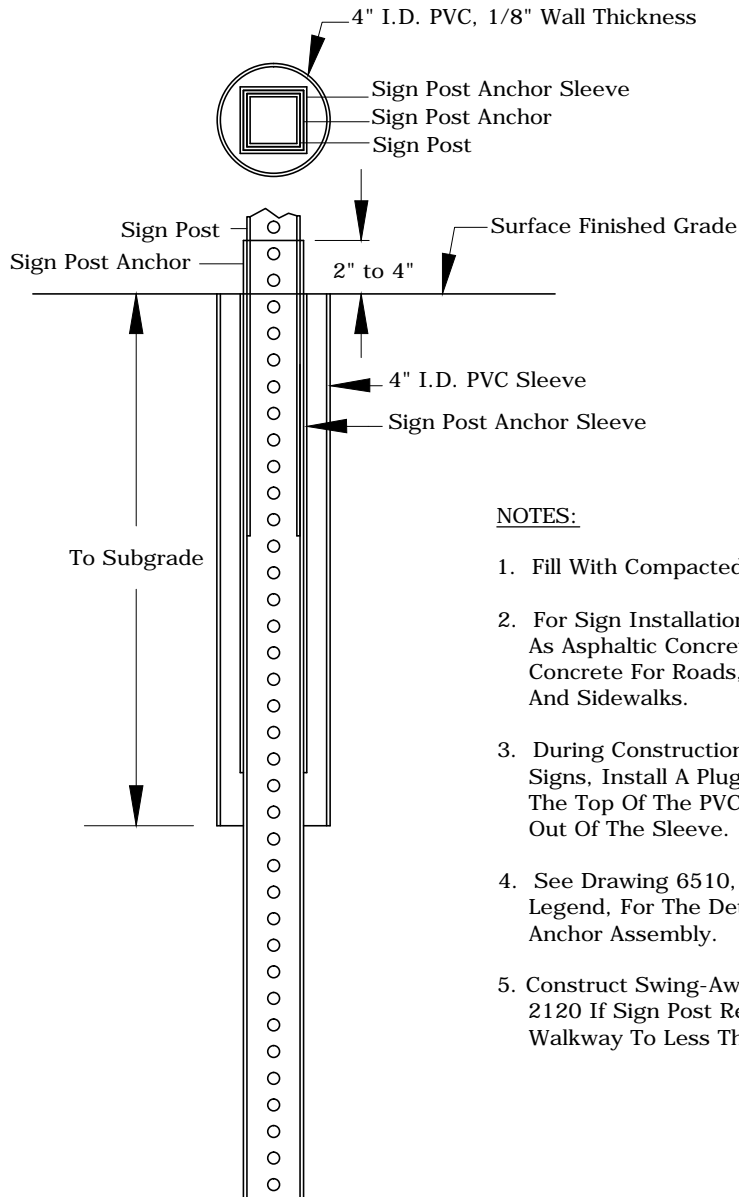

NOTES:

1. Fill With Compacted Sand.
2. For Sign Installation In Hard Surfaces Such As Asphaltic Concrete And Portland Cement Concrete For Roads, Raised Medians/Islands And Sidewalks.
3. During Construction, Prior To Installing The Signs, Install A Plug Into Or A Cap Onto The Top Of The PVC Sleeve To Keep Debris Out Of The Sleeve.
4. See Drawing 6510, Permanent Signing Legend, For The Details Of The Sign Post Anchor Assembly.
5. Construct Swing-Away Apron Per Drawing 2120 If Sign Post Restricts Pedestrian Walkway To Less Than 5' Width.



WASHINGTON COUNTY
DEPARTMENT OF LAND USE &
TRANSPORTATION
ENGINEERING SECTION

**SIGN POST INSTALL IN P.C.
CONCRETE OR ASPHALT**

PLOT STAMP: 08/27/19 4:57P ANTHONYD
CAD: 6050.DWG

EFFECTIVE DATE: **9/01/2019**

WASH. CO. # **6050**